

Slave Firmware Compatibility

Versions	Comfort I	G2 5.031-5.077	G2 > 5.078
SEM 1 <=4.95	Compatible	Not Compatible	Not Compatible
SEM1 > 4.177	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones may cause false alarms due to 3FH. Slave LEM zones detected	Slave zones do not cause False alarms. Slave LEM zones detected
SEM2 <5.081	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones do not cause false alarms. Slave LEM zones detected
SEM2 5.081 to 5.084	Slave zones do not cause false alarms. Slave LEM zones not detected	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones do not cause false alarms. Slave LEM zones not detected
SEM2 5.085	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones do not cause false alarms. Slave LEM zones detected	Slave zones do not cause false alarms. Slave LEM zones detected

Slave Low Battery Behaviour

Versions	Comfort 1 Comfort 2 < 5.069	Comfort 2 > 5.069
SEM G1 SEM G2 <5.082	SEM does not do Battery test	SEM does battery test but will end battery test when Comfort ends its battery test, ie when Comfort (not SEM) detects low battery or at the end of 2 minutes
SEMG2 >5.084	SEM does not do Battery test	SEM does battery test and will end the test when it detects low battery or at the end of 2 minutes, not depending on Comfort